



SL-ZAKD 80(128)A...
SL-ZIKD 100A...
SL-ZIKD 63A...
SL-AKS/Z 63(100)A...

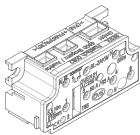

SL-ZAKW 63(100)A....

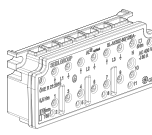

SL-AKS/Z 80(128)A....










de	Originalbetriebsanleitung	fi	Alkuperäiset ohjeet
en	Original instruction	no	Original bruksanvisning
fr	Notice originale	da	Original brugsanvisning
nl	Oorspronkelijke gebruiksaanwijzing	pl	Instrukcja oryginalną
it	Istruzioni originali	hu	Eredeti használati utasítás
es	Manual original	sv	Bruksanvisning i original
pt	Manual original		



EN 60903
(VDE 0682-311)





AC 1000V
EN IEC 60900

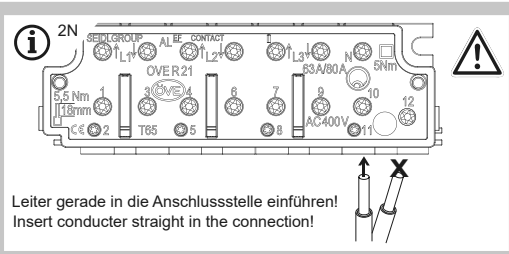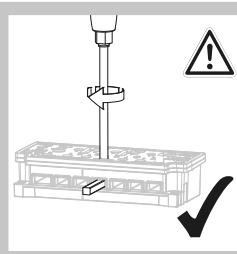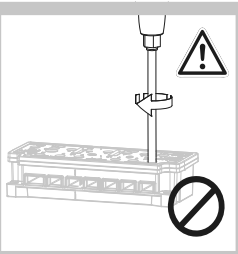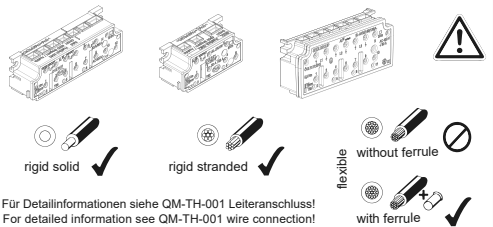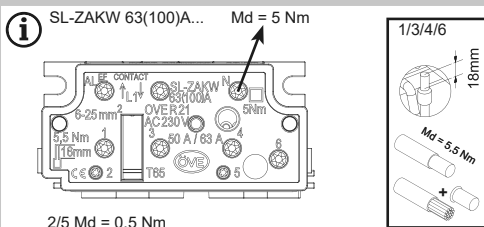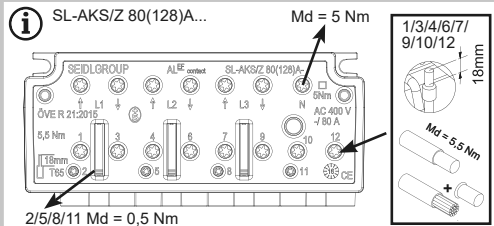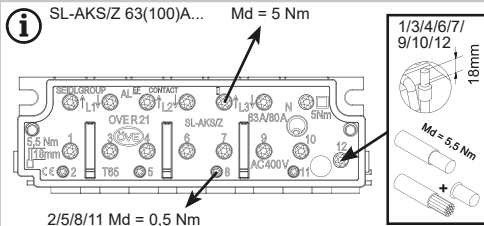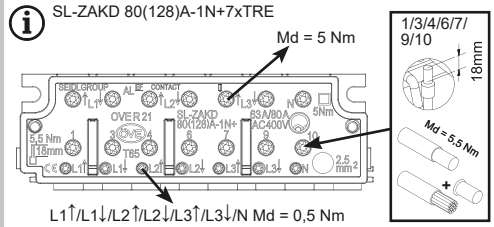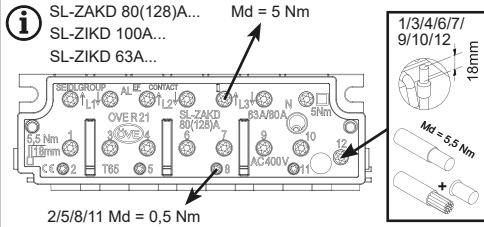


Sicherheitshinweis:
Schalten Sie die Anlage spannungsfrei




Montage
Zähleranschluss-
klemme
(Bild 1 - 7)

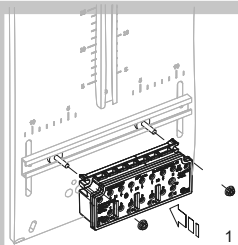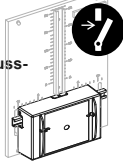


1

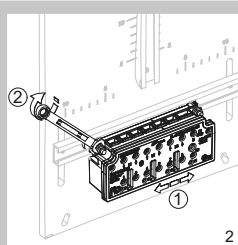

2

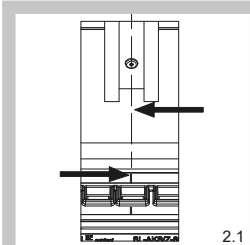


2.1

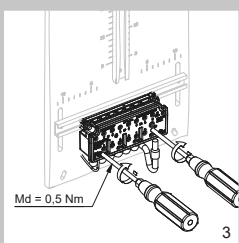


$M_d = 0,5 \text{ Nm}$

3

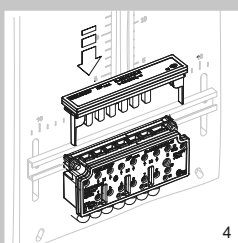


4

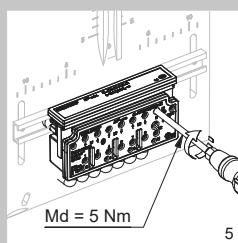


$M_d = 5 \text{ Nm}$


5

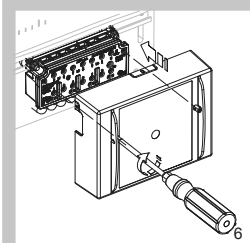

6


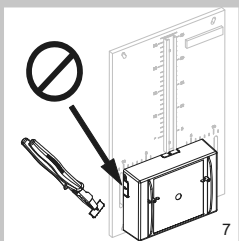


7

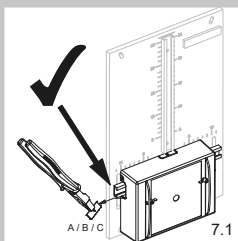


A/B/C


7.1

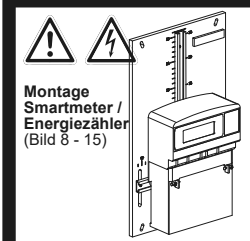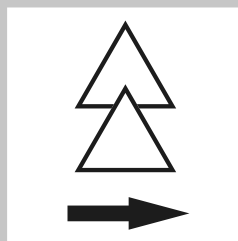


Montage
Smartmeter /
Energiezähler
(Bild 8 - 15)

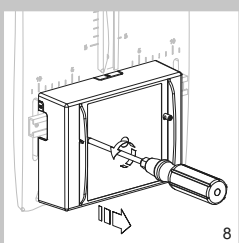


8

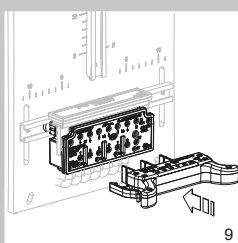


9

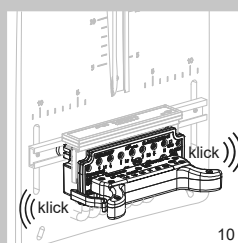


10

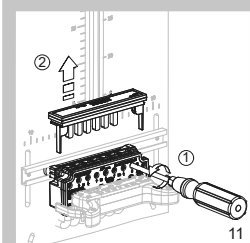

11

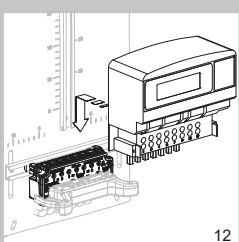


12

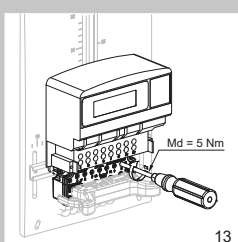


$M_d = 5 \text{ Nm}$

13

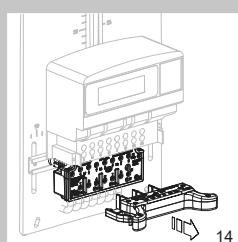

14

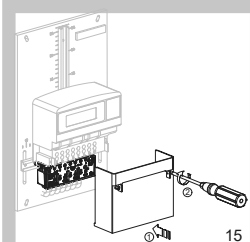

15

de	Originalbetriebsanleitung	fi	Alkuperäiset ohjeet
en	Original instruction	no	Original bruksanvisning
fr	Notice originale	da	Original brugsanvisning
nl	Oorspronkelijke gebruiksaanwijzing	pl	Instrukcja oryginalną
it	Istruzioni originali	hu	Eredeti használati utasítás
es	Manual original	sv	Bruksanvisning i original
pt	Manual original		

SL-ZSK 50(80)A
SL-ZSK 63A

SL-ZSK 50(80)A
SL-ZSK 63A

Sicherheitshinweis:
Schalten Sie die Anlage spannungsfrei

Montage
Zähleranschluss-
klemme
(Bild 1 - 7)

Montage
Smartmeter /
Energiezähler
(Bild 8 - 14)

1

2

2.1

3

